



LABELING MODE

Label Jog
Select Program
Information Display
Reset Counter
Preset Counter
Select Counter (Labels/Goods/Ext.)
Reset Nonstop



PROGRAMMING

Change Program

Label Scanner Sensitivity
Auto Adjust
Manual Adjust
Label Length
Auto Adjust
Manual Adjust
Label Suppression
Predispensing
Position
Speed
Fixed Speed
Incremental Encoder
Measuring Scanners
Maximum Speed
Goods Suppression
Labeling Mode
Normal Labeling
Multiple Labeling
Delayed Predispensing
Profiling

Store Program
Program Name
Program Presets



CONFIGURATION

User Menu
Language
User Level
Change Level
Change Password
Error Handling
Nonstop Mode
Function (On / Off)
Adapter Magnet
Release Delay
Motor Direction
Right / Left
Polarity IFEED
(Normal / Inverse)



SERVICE FUNCTIONS

Software Version
Error Sequence
Self Test
Test Ram
Test EEPROM
Test Keyboard
Test LED
Test LCD
Test Illumination
Test IO Control
Test IO Monitor
Test Drive
Remote Control
Working Time
Motor Running